




All parts list

Some may be a little different




There holes are small round holes now.
And there are more screw holes now.


Put Part "BL", "B1" and "BR" as above.

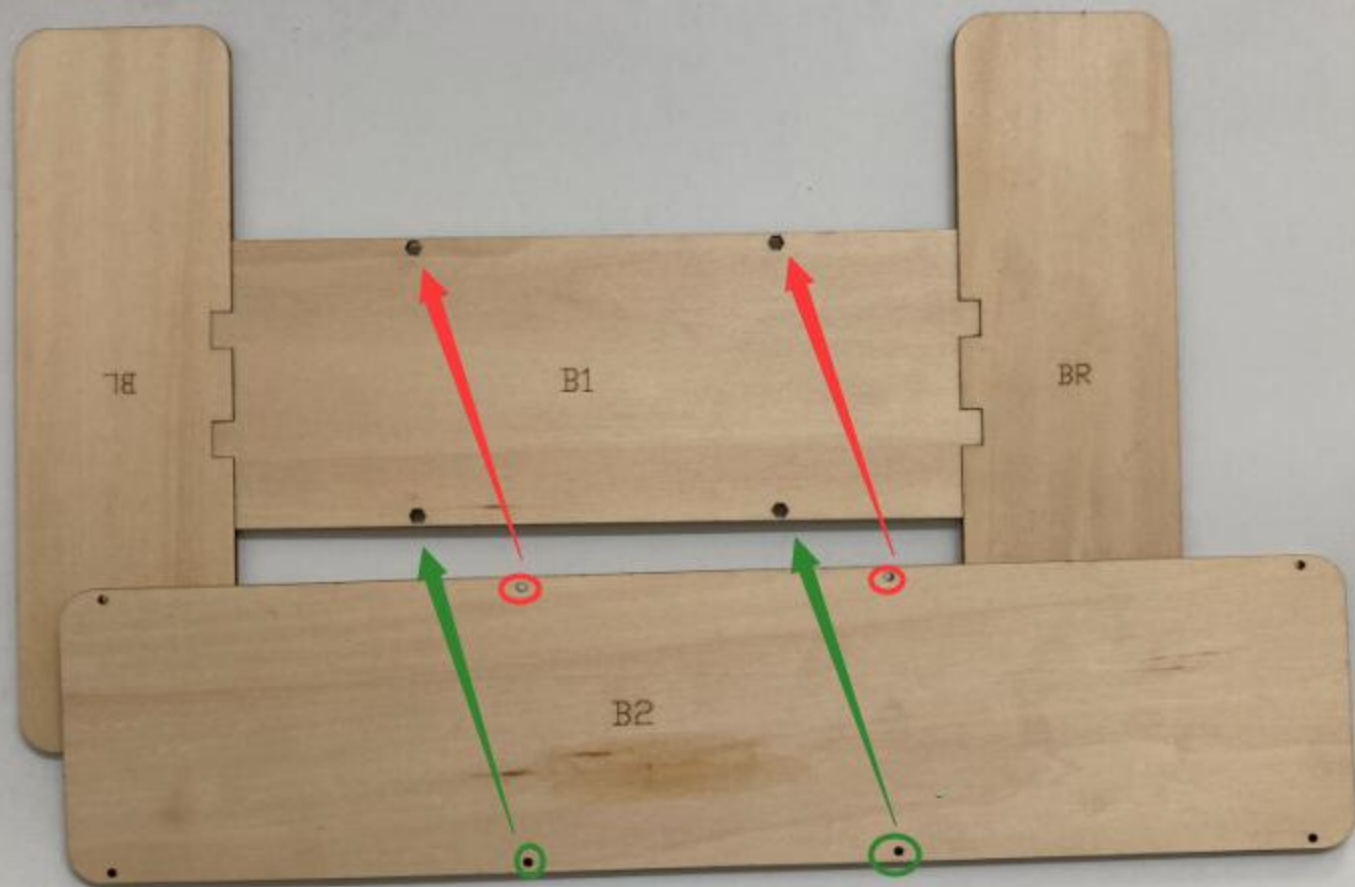

Put Part "B2" on "B1", make sure that the holes align.

Keep holes align.

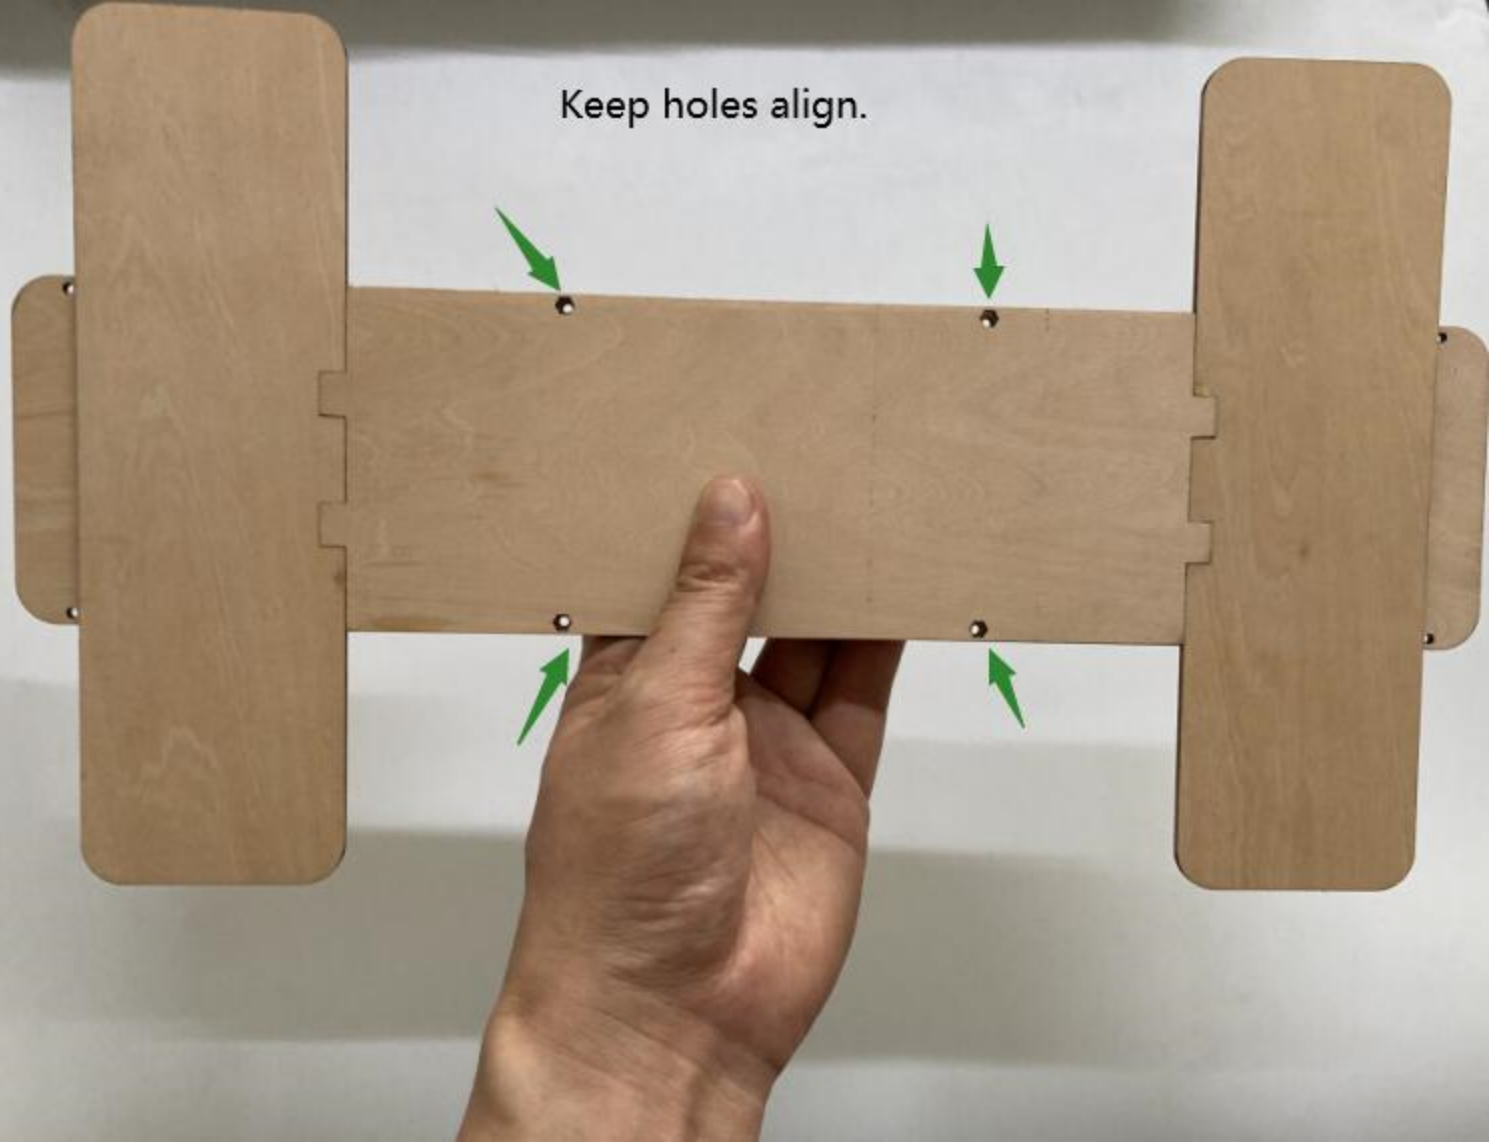

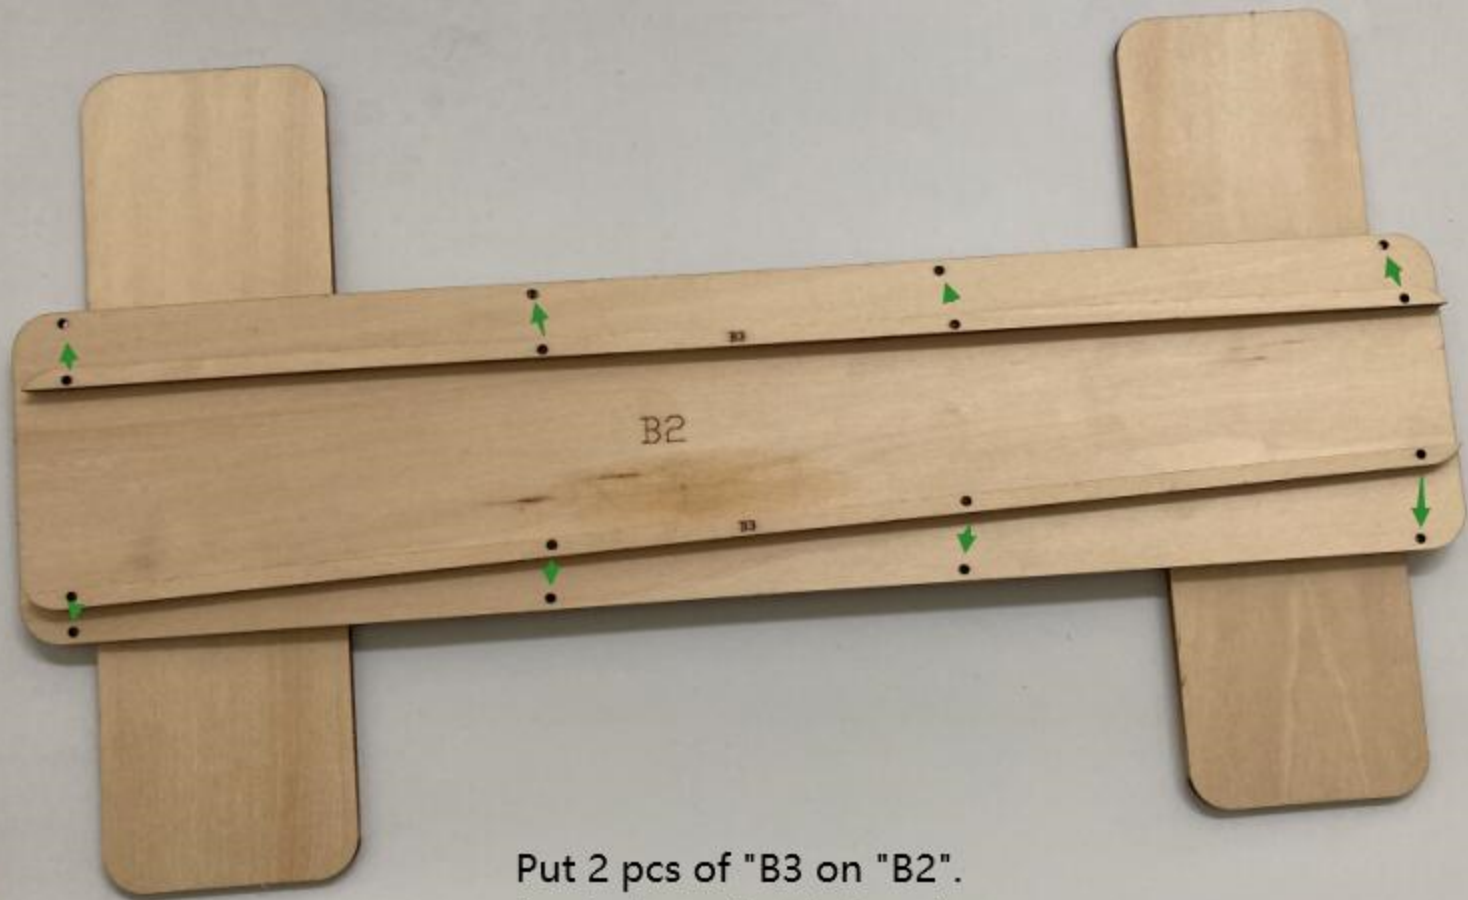


Put 2 pcs of "B3 on "B2".
Again keep the holes align.


Holes align as below.



Now assemble the "T2" on "T4"

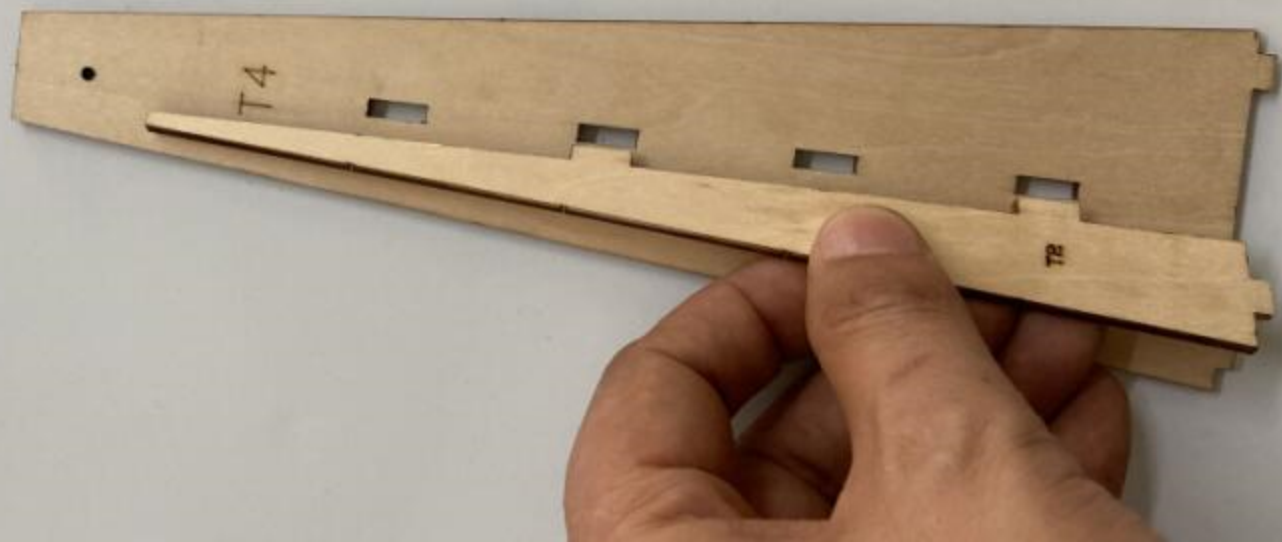


And install "T3" on the other side.

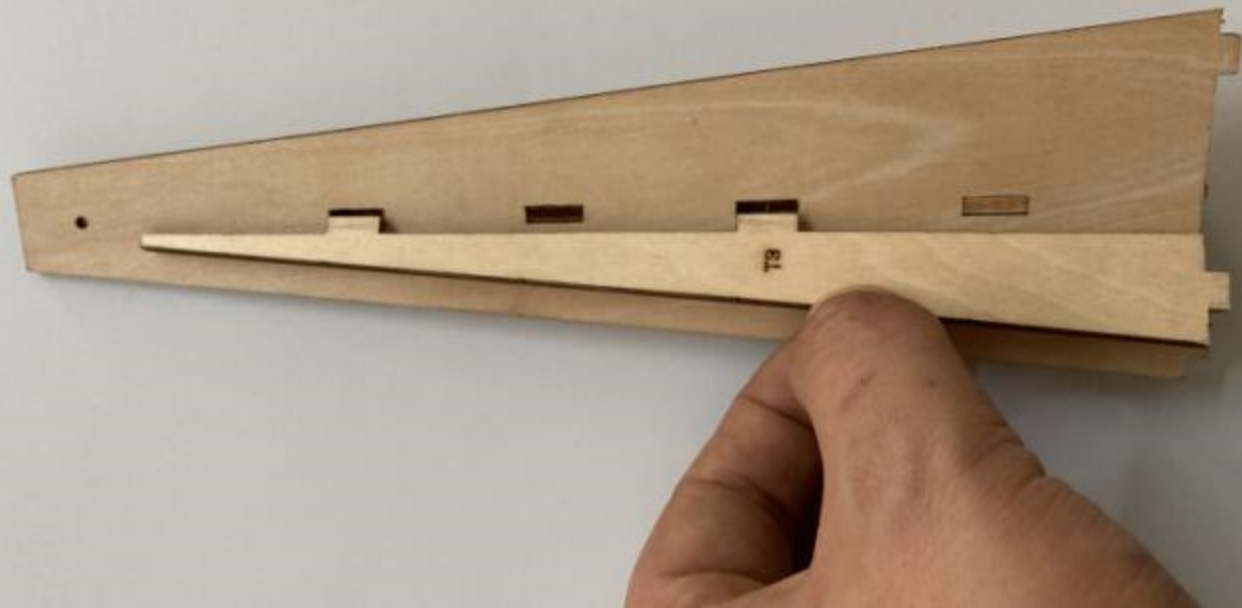



Install "T2", "T3", and "T4" on "TB".

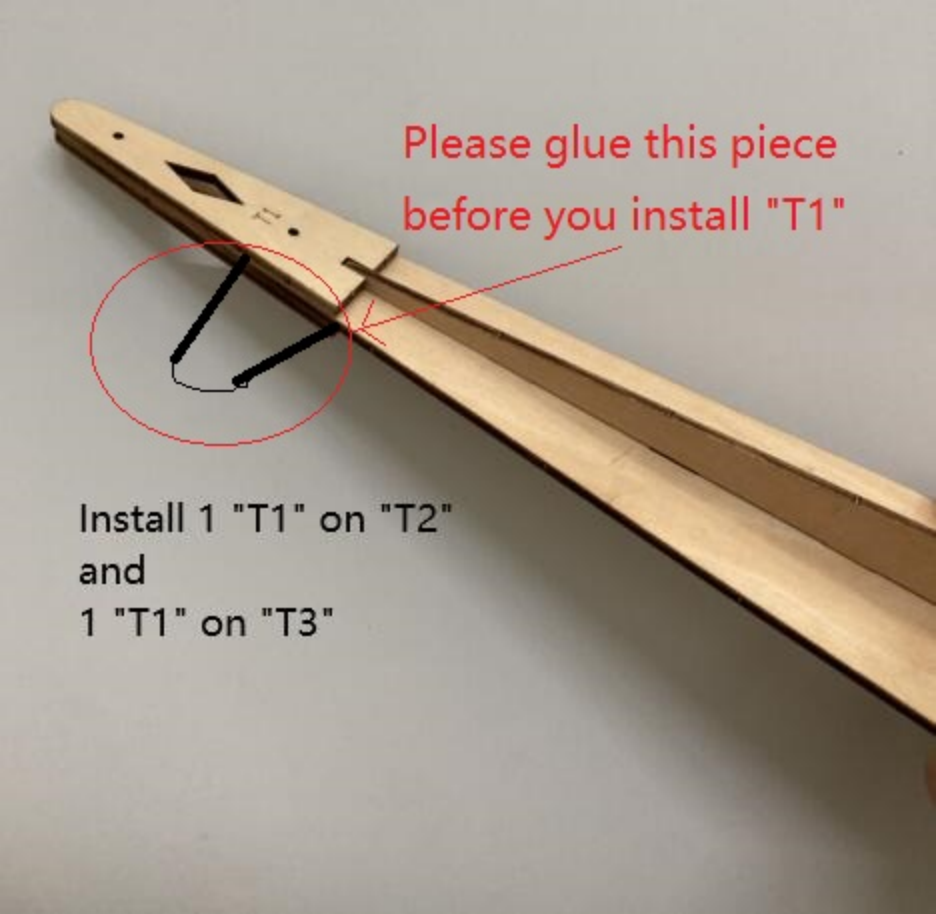

Please glue this piece
before you install "T1"


Install 1 "T1" on "T2"
and
1 "T1" on "T3"



Drive 1 screw to lock
"T1" bottom
and put small "T2"
between 2 pcs of "T1"
before you drive the
other screw.


Put this small part
in before you
drive the screw.



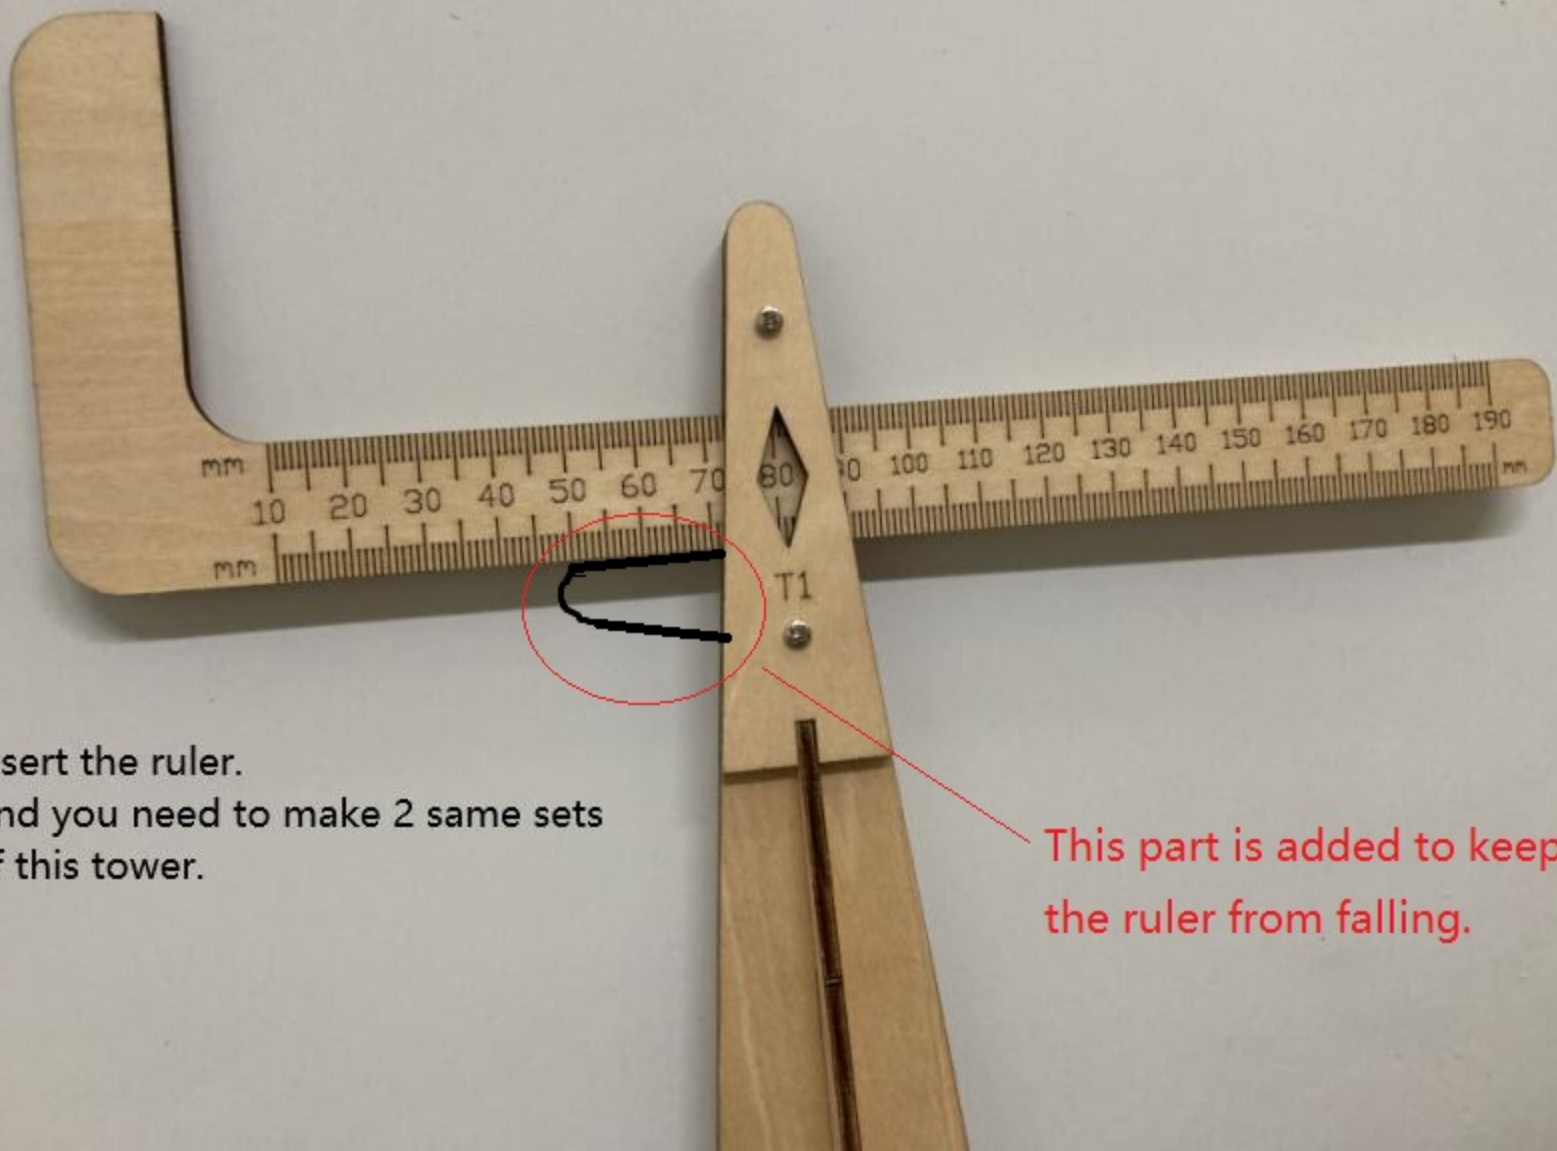

Insert the ruler.
And you need to make 2 same sets
of this tower.

This part is added to keep
the ruler from falling.

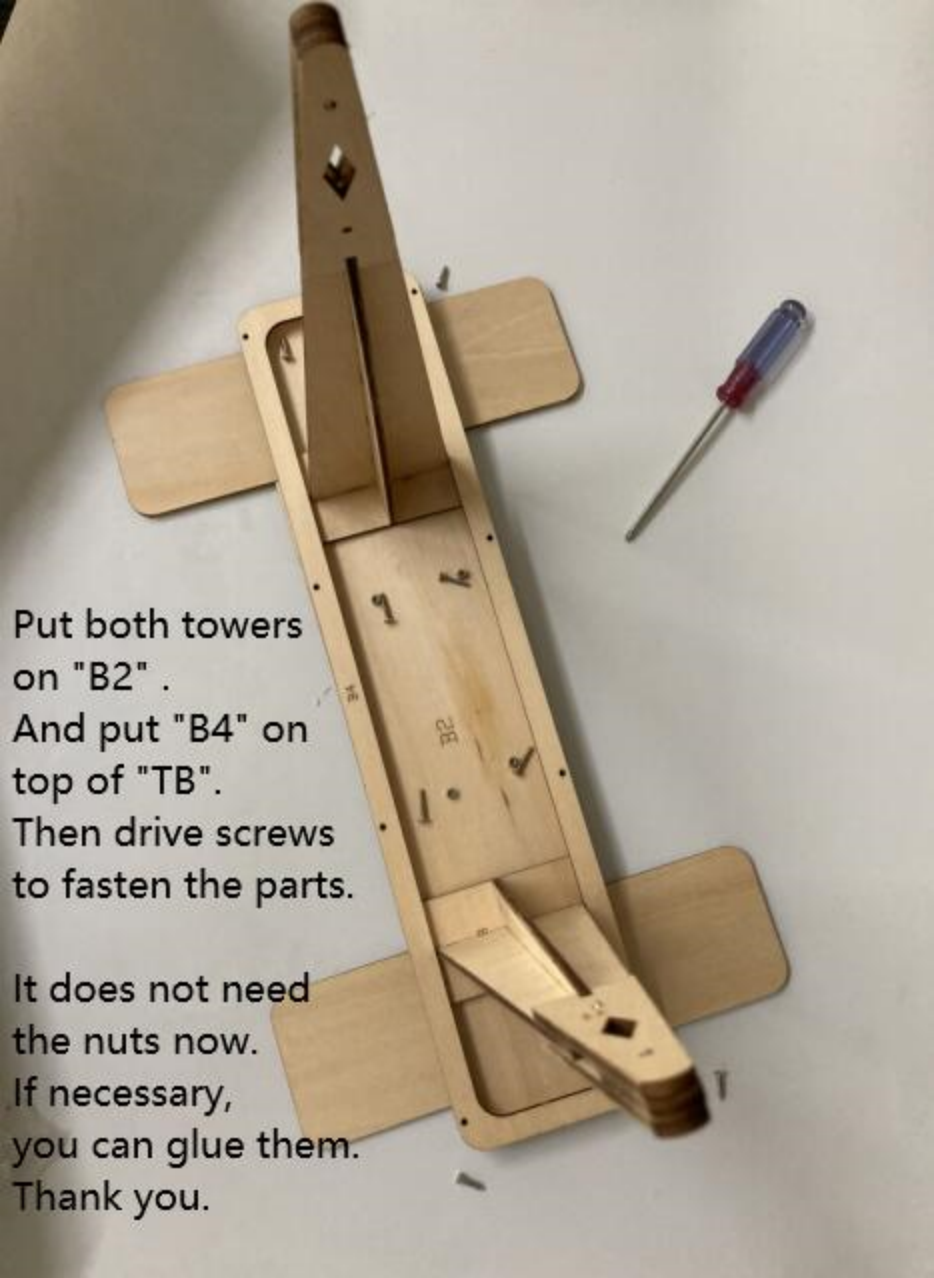

Put both towers
on "B2" .
And put "B4" on
top of "TB" .
Then drive screws
to fasten the parts.

It does not need
the nuts now.
If necessary,
you can glue them.
Thank you.